Bb TALKIN'

High Grade Motorcycle Intercom



USER GUIDE

BbMOTO Ver.001

Thank you for choosing Bb MOTO. This instruction will help you operate this system. First, read this instruction carefully and familiarize yourself with funtionalities before use.

www.bbtalkin.com/moto



SPEC

Model name: BM01 Intercall talk time — 15 hr Charge time ______ 2.5 hr Weight — 45.2 g Range — Over 1 km Waterproof —

CHARGING

- AC adaptor 5V ± 5% min. 500mA
- Charging cable: USB Type-C
- How to know battery status from LED indicator: Blue=100%-60%

Purple=60%-40% Red=battery low


• Battery Charge status:

Red=Charging Blue=Full Charged

■ INFORMATION

- Further information: www.bbtalkin.com/moto-support
- For latest information: www.bbtalkin.com/moto
- For apps information: www.bbtalkin.com/apps

■ DETAIL

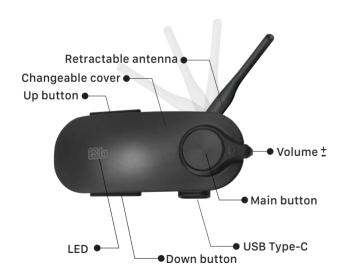

LIMITED WARRANTY

This limited warranty covers defects in materials and workmanship in this product for twelve month (12) months for main

This limited warranty covers defects in materials and workmanship in this product for twelve month (12) months for main device only. The warranty obligations of BbTALKIN for this product are limited to the terms set forth below: This limited warranty does not cover any damage, rusty USB part, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping, lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by BbTALKI or make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover carrons, equipment enclosures, cables or accessories used in conjunction with its product. If it is product is returned to BbTALKIN or the authorized dealer from which it was purchased or any other party authorized to repair BbTALKIN surged to the provident of the product of the produc

not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product. This product is covered and the product is covered under this limited warranty is not transferable to subsequent purchasers or owners of this product. Only the original purchaser or owners of this product. How to Obtain a Remedy under this Limited Warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product. How to Obtain a Remedy under this Limited Warranty. To obtain a remedy under this Limited Warranty. To obtain a remedy under this limited warranty, you must contact either the authorized BbTALKIN reseller from whom you purchased this product or the BbTALKIN office nearest you. For a list of authorized BbTALKIN resellers and/or BbTALKIN under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized bbTALKIN reseller, it is product is returned under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized bbTALKIN reseller fits product is returned under this limited warranty, are turn authorization number, of the product of the pr

Limitation on Liability

THE MAXIMUM LIABILITY OF BBTALKIN UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE
PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BBTALKIN IS NOT RESPONSIBLE FOR DIRECT.
PSECIAL INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY REACH OF WARRANTY OR COMBITION, OR
UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special,
incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or
exclusions may not apply to you.

▲WARNING

- DO NOT modify or disassemble the device.
- The area you cannot use: in the airplane, near the person with medical devices or equipment such as pacemaker, etc.
- DO NOT expose this device to extreme temperature or humidity
- When BbMOTO device gets damaged, stop using immediately.
- To avoid hearing damage, make sure to set volume to a safe level.

■ BASIC OPERATION

POWER ON/OFF

Press and hold MAIN and DOWN button for 1sec. until LED blue flashes.



PHONE PAIRING

①Enable smart phone's BLUETOOTH search mode. @When BbMOTO is in OFF status, press and hold MAIN and DOWN button for 5sec. until LED blue and red flashes alternately.



3 Select "BbMOTO-XXXX" on the phone, while LED becomes blue, pairing succeed.

▲NOTICE:

- After initial pairing setting, devices will memorize pairing. For next use, just turn on the device and will automatically link. (make sure phone's BLUETOOTH is on.)
- If it does not pair with phone automatically, press MAIN button

HANDSFREE (After pair with phone)

1. Press MAIN button once to Accept/End the phone



2. Press MAIN button twice quickly to Redail/Decline the phone call.(* Redail the phone call which the last one you CALL OUT.)



3. Press and hold MAIN button for 2sec. to call "Siri for iOS or "Google Assistant" for Android.



4. Rotate Up/Down the MAIN button to adjust



MUSIC PLAY (After pair with phone)

1. Press MAIN button once to Play/Pause the music.



2. Rotate Up/Down and hold the MAIN button to Foward/Backward the music.



3. Rotate Up/Down the MAIN button to adjust the volume.



INTERCALL (Smart link)

*For further detail operations, please see the back page.

RESET (Delete pairing memory)

When BbMOTO is in OFF status, press and hold UP MAIN, DOWN button until LED purple flashes.



UPDATE (Update by computer)

①Plug in USB Type-C to PC (*Windows only).



- ②Press and hold UP and DOWN button for 3sec. until LED blue and red flashes alternately.
- 30pen the Dfu Wizard and follow the steps to update the firmware. Updating by computer is faster than by app.

SMART LINK (Up to 6 devices)

Step 1. Turn ON all devices

 Press and hold all devices' MAIN and DOWN button (3sec.) until LED blue flashes.

Step 2. Set up pairing

- Press and hold all devices DOWN button (3sec.) until LED vellow flashes.
- Press either one of device's DOWN button once, the device's LED yellow will become purple quick flash.
- When LED purple quick flash becomes green slow flash.
 It means pairing succeed.
- The second device will search other devices and get paired automatically, this process will go on automatically until all devices get paired.



▲ NOTICE:

- For first pairing procedure, it takes 30~60 secs until all devices show LED green flash. The last device will be in searching mode(LED purple) for one minute, while all devices become LED green slow flash, all pairing procedure is completed.
- Once devices have done initial pairing, they will memorize pairing.
 For next use, after turning on all devices, only ONE user needs to press
 DOWN button, other devices will be paired automatically.
- When the intercall disconnect due to weak signal, it will search signal and relink automatically within one minute. (LED is purple qick flash while searching. When devices are connected, LED will become slow green flash.)
- If auto relink search over than one minute, please get closer between two devices and press DOWN button once to relink again.
- When manually press the DOWN button to disconnect the intercall, must press DOWN button once again manually to relink again after one minute.
- Even some of the devices leave the intercall area, other devices are still connected.
- It is better to regroup(relink) if the members are not the exact members as last time.



Intercall with phone pairing Intercall without phone pairing 200~600m Group talk area's diameter will between 200~600meter will over 1000meter

INTERCALL + PHONE CALL (HSP)

- WHILE INTERCALLING + MAKE PHONE CALL
- Make the phone call by smart phone.
- Press MAIN button twice quickly to redial the phone call.
- WHILE INTERCALLING + INCOMING CALL



- Press MAIN button once to accept the incoming call.
- Press MAIN button twice quickly to decline the incoming call.
- Press DOWN button to cut off intercall and will accept phone call automatically.

■ WHILE PHONE CALLING (INTERCALL HOLD)

 Press MAIN button to end the phone call, intercall will come back automatically.



 Press DOWN button for 2sec. to let phone call Join/Leave group talk.



 Press DOWN button once to cut off intercall and continue the phone call.

▲NOTICE:

When manually press the **DOWN** button to disconnect the intercall, must press **DOWN** button once to relink the intercall.

INTERCALL + MUSIC (A2DP)

■ While intercalling, press MAIN button once to add music, press MAIN once again to pause music.

- While listening music, press DOWN button once to Link/ Cut off the intercall.
- While intercalling, press MAIN button once to add music, press MAIN button once again to pause music.
- While listening music, press DOWN once to Link/Cut off the intercall.

▲ NOTICE:

- For Android system, make sure to go to music page first.
- For iOS system, it will go to default app MUSIC automatically.

ONLINE INTERCALL











 After pairing with smart phone, turn on "Bb TALK" app and start to talk.



 While online intercalling, press UP button once to leave or get into the chat room.

RECORD INTERCALL CONVERSATION DURING VIDEO RECORDING











 After pairing with smart phone, open "Bb CAM" app, then the app can record audio during video recording.







"BbCAM" app supports almost every BLUETOOTH Mics.

■ UPDATE BY APP











 After pairing with smart phone, open "Bb MOTO" app and press and hold UP & DOWN button (3sec.) until LED red, blue and green flashes, you can start to update the firmware.



ullet You can easily change the setting by "Bb MOTO" app .