## **Bb TALKIN'**

## **BbSPEAKER**

## **USERS GUIDE**

**BbSPEAKER** MODEL: A01SPK

Thank you for choosing BbSPEAKER. This instruction manual will help you operate this system. First, read this manual carefully and familiarize yourself with functionalities before use.

www.bbtalkin.com

## ■ Specs ■

Intercall talk time —	 6-8 h
Charge time	 3 hr
Weight —	 162 g
Range —	 1 km
Water-proof —	 IPX 5

## ■ Charging

- \*AC adaptor 500mA-1A 5V
- \*Please make sure the device is completely dried before charging
- \*Charging cable: Micro USB

Battery status:

Blue=75%-100%. Purple=50%-75% RED=battery low

(at start indicate)



**Battery Charge:** Red=Charging Blue=Full charged

### LIMITED WARRANTY

This limited warranty covers defects in materials and workmanship in this product for twelve month (12) months for main device only. The warranty obligations of BbTALKIN for this product are limited to the terms set forth below: This limited warranty does not cover any damage, rusty USB part, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping, lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation, any many installation, any installation, any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover across, equipment enclosures, cables or accessories used in conjunction with this product. or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment endosures, cables or accessories used in conjunction with is product. If this product is returned to BbTALKIN or the authorized dealer from which it was purchased or any other party authorized to repair BbTALKIN product, his product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. BbTALKIN will not be responsible for any costs related to the removal or re-installation of this product, any adjustment of user controls or any programming required for a specific installation of this product, any adjustment of user controls or any programming required for a specific installation of this product, any adjustment of user controls or any programming required for a specific installation of this product, it may damage go the device to use thirty-party USB wire headphone or earphones etc., BbTALKIN will not be responsible. Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to How to Obtain a Remedy under this limited Warranty. You must contact either the authorized BbTALKIN reseller from whom you purchased this product or the BbTALKIN free nearest you. For a list of authorized BbTALKIN resellers and/or BbTALKIN authorized service providers, please wish our web site at www.bbtalkin.com or contact the BbTALKIN dealer nearest you.

autorized service provides, pieses with our web just at www.bushaint.com or contact the burround seater healest yet In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized BbTALKIN reseller. If this product is returned under this limited warranty, a return authorization number, obtained from BbTALKIN, will be required. You may also be directed to an authorized reseller or a person authorized by BbTALKIN to repair the product. If it is decided that this product should be returned directly to BbTALKIN, this product should


BBTALKIN to repair the product. If it is decided that this product should be returned directly to BbTALKIN, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused. Limitation on Liability.

THE MAXIMUM LIABILITY OF BBTALKIN UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, BBTALKIN IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or




### WARNING

- \*DO NOT modify or disassemble the device.
- \*The area you cannot use (in the airplane, near the person with medical devices or equipment such as pacemaker etc..)
- \*DO NOT expose this device to extreme temperature or humidity place.
- \*When BbSPEAKER gets damaged, stop using immediately.
- \*DO NOT put the BbSPEAKER near the microphone, it may cause speaker howling.



## **DISTANCE**

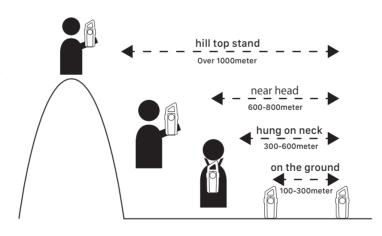

\* must be line of sight



**BbSPEAKER X 1 BbSPEAKER BAG X 1** MICRO USB CABLE X 1 STAND MOUNT X 1 **EXTERNAL WIRE MICROPHONE X 1** 

## **USERS GUIDE**

V. 009.0

# How to pair with BBT Standard device

(Press & hold 2 sec.) A1. Turn on the power



(Press & hold 2 sec.) A2. Turn on the power



B1. Press and hold CH1 button until red light flashes.



B2. Press and hold CH1 or CH2 button until red light flashes.



C. Press one time CH1 button





BLUE slow flashing light on both units indicates that they are paired and ready to use.

Note: After you have paired the units, it will memorize the pairing and all you need to do is turn them on and press the Channel button on BbSPEAKER to connect. \*If you want to add one more BBT device to become 3 way communication, just follow above stepB & C again, and make sure CH2 is not paired yet.

## How to pair with your phone

1.When power is **off** press and hold power button for 5sec. until you see the red & blue light come on.


2.Open your smartphone Bluetooth and select bsptt-xxxxxx.

Note: After you have paired the units, it will memorize the pairing and will

(Make sure the phone Bluetooth is on)

automatically link when next time you turn on BbSPEAKER.

HOLD 2sec **(**) POWER ON/OFF CLICK ►II PLAY/STOP MUSIC CLICK PICK/HANG UP THE PHONE

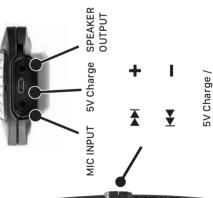

# Intercall with BBT ADVANCE devices

\*only it can pairing 2 Advance units but you cannot talk 3 people at the 1. BbSPEAKER can pair with the other two Advance units. same time.

2.If you want to hang up/pick up the intercall, just press Channel button (CH1 or CH2) once.





## NOTE

## **PAIRING**

If pairing with the other two Advance units, BbSPEAKER must be in the middle position between two Advance units.



If pairing with the other two Advance units, the intercall must from BbSPEAKER, do not call from the Advance unit to BbSPEAKER. ( Please make sure that you already hang up the intercall from one of Advance

# Intercall with other BbSPEAKER device

1.Turn on two BbSPEAKERS.

2.Press & hold BbSPEAKER A and B's channel button (CH1) until red light flashes.

(Blue slow flashing light on both units indicates that they are paired) 3. Press one time Ch1 button on BbSPEAKER A.





NOTE

**PUSH TO TALK BUTTON** SMART WALKIE TALKIE MIC INPUT/ SPEAKER OUTPUT